



Caster mounts are bolted to the leg upright using the 2" long bolts, nuts, and washers provided- The caster is a stem caster it needs to be threaded into the bottom of the adjuster then attached to the leg upright. On a non-adjustable Ht. bench, the caster screws directly into the bottom of the leg where a threaded part will be welded in place.



